

NEW!

Light-weight and handy, portable
Bearing Packer

Mess and hassle free solution for quick
removal of old grease and replacement
with new grease

Designed for use on bearings with:

- Minimum dia. of 1-3/4" (45mm)
- Maximum dia. 3-1/2" (90 mm)

Using the bearing packer

Simple hand press mechanism
eliminates the need for any grease gun
or pump to grease the bearing

Useful for greasing bearings in cars,
boats, tractors, RV's etc



Place bearing on piston
Maximum bearing dia. 3-1/2"
(90mm)



Press the cap until the old grease
is forced out and new grease
shows on the bearing

USEFUL TIPS!

Always use recommended grade of
grease. Some grades of grease cannot
handle temperature of wheel bearing
applications

Do not use compressed air for
cleaning the bearing prior to use with
the bearing packer. This is unsafe and
could damage the race

ORDERING INFORMATION

CAT NR.	ORD NR.	BOX QTY.
BEP/10	44940	25



SCAN TO
WATCH



Cap protects grease from
contaminants