

**Steel Bearing
Packer Deluxe****BEP-625**

Rugged steel Bearing
Packers

Useful for greasing
bearings in cars, boats,
tractors, RV's etc.

- Rapid action Bench
Type Bearing Packer
- Non threaded top cone
for fast placement of
bearings
- Design incorporates
grease nipple on the
outer shaft, which
easily adapts to the
grease gun coupler
- Suited for bearings with
a min. inner dia. of 1/2"
(12 mm), to a max. outer
dia. of 6" (150 mm) and
height from 3/8" (10 mm)
to 2" (50 mm)
- For use with standard
grease guns



CAT NR.	ORD NR.
BEP/625	44847

SAFETY INFORMATION

- Follow workshop health & safety rules, regulations and conditions when using the Bearing packer.
- Keep the Bearing packer clean and in good working order for best and safest performance.
- DO NOT use the Bearing packer for a task it is not designed to perform.
- DO NOT drop, throw or abuse the Bearing packer.
- Read and understand all instructions.

PACKAGE CONTENT

DESCRIPTION	QUANTITY
Bearing Packer	1
O.I.P.M.	1

Features

- Rapid Action Mechanism achieved through a non threaded top cone for fast placement of bearings
- All Steel Construction
- Includes Dust cover
- Useful for greasing bearings in cars, boats, tractors, RV's etc.
- For use with bearings with a minimum inner dia. of 1/2" (12 mm) to a max. outer dia. of 6" (150 mm) & a height from 3/8" (10 mm) to 2" (50 mm)

INSTRUCTIONS



- Attach the base to a Bench or any surface
- Open the Dust cover
- Press the locking lever on top of the smaller cone, connecting the cone to the center shaft. This will instantly disconnect the smaller cone from the center shaft. Remove the smaller cone
- Place the Bearing on the lower large cone.
- Insert the Small cone back on the center shaft & press it down. The small cone should seal the bearing completely
- Using a Hand or Grease Gun, grease the fitting installed below the large cone on the lower shaft
- Once the bearing is fully greased, grease will start flowing out of the bearing, which can be seen between the 2 cones
- Stop the Greasing action & disconnect the grease gun from the fitting
- Press the locking lever on top of the smaller cone, connecting the cone to the center shaft. This will instantly disconnect the smaller cone from the center shaft. Remove the smaller cone & then remove the bearing which is now fully & evenly greased

Useful Tips

Always use recommended grade of grease. Some grades of grease cannot handle temperatures of wheel bearing applications

Do not use compressed air to clean the bearing prior to use with the bearing packer. This is unsafe & could damage the race

EXLODED VIEW

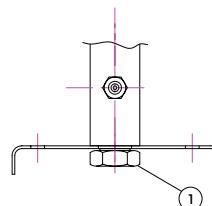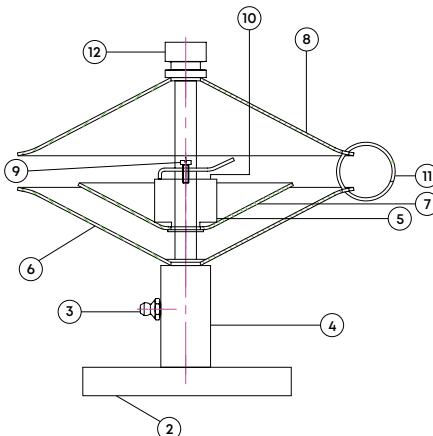

PART LIST

REF. NO.	DESCRIPTION	QUANTITY
1	BOLT	1
2	BASE PLATE	1
3	GREASE FITTING	1
4	ADAPTOR BIG	1
5	ADAPTOR (SMALL)	1
6	BIG PLATE	1
7	SMALL PLATE	1
8	COVER PALTE	1
9	SCREW - M4	1
10	LOCKING LEVER	1
11	RING	1
12	CAP	1



NOTE



GROZ WARRANTY POLICY

Groz makes all efforts to ensure that its products meet the highest standards of quality and durability and warrants to the original purchaser its range of products for a period of 12 months from Groz Invoice date, against defects in materials and workmanship. If the Groz product is part of a set, only the portion that is defective is subject to this warranty.

This warranty does not apply to damage due directly or indirectly, to misuse, abuse, wear and tear, negligence or accident, repairs or alterations outside Groz plants, or to lack of maintenance. Groz shall in no event be liable for death, injuries to persons or property or for incidental, contingent, special or consequential damages arising from the use of its products. It is upto the user to determine suitability and safety of the product for their intended use, and the user assumes all risks and liability herewith.

In no event, shall Groz's liability exceed the invoiced cost of the product. In case of identification of defect covered under this warranty, the same must be notified in writing to Groz /Groz designated authorized service location. Proof of purchase date must accompany the complaint. Groz reserves the right to call back the faulty unit, all charges including transportation prepaid. On verification of the defect, the unit will be repaired or replaced with a new or reconditioned product or part of equal utility or a full refund given at Groz's discretion. The repaired /replaced units will be returned to the user freight prepaid, using most economical freight carrier. However if determined that the defect resulted from causes not within the scope of the warranty, then the cost of returning the product would be to buyer's account.

Groz Engineering Tools Pvt. Ltd.
Groz Net Industries

Village Kherki Daula, National Highway-8,
Gurugram-122001, Haryana, INDIA

Tel +91.124.282.7700
E-Mail info@groz-tools.com
Url www.groz-tools.com

The GROZ name, GROZ logo and the are trademarks of GROZ Engineering Tools Pvt. Ltd., India